


Boogie Board™

LCD Writing Tablet

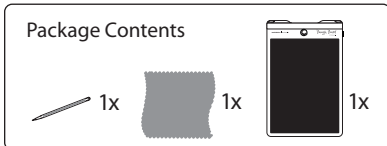

1 Write / Draw

Screen contrast is best in bright light.

Built-in stylus holder

Do not use any tool that could potentially puncture, scratch, permanently mark, or smudge the writing surface. Do not apply extreme concentrated pressure to the writing surface.

Tablet does not connect to a computer and cannot save images.

Do not submerge tablet in water.

Do not expose tablet to prolonged sunlight.

Storage	Operating
145°F / 65°C	100°F / 40°C
15°F / -10°C	50°F / 10°C

2 Erase

Screen will flash when erased.

Slide the switch on the right side of the tablet up to prevent accidental erasure.

3 Clip a lanyard or charms to the loops on the top of the tablet.

4 Clean

Use only Boogie Board tablet Screen Cleaner (sold separately) or dry cleaning cloth.

5 Change batteries (2 AAAA) in back of tablet when erasing does not function. One set of batteries lasts for tens of thousands of erases!

6 Recycle

Protect the environment by not disposing of this product with household waste (2002/96/EC). Check with local agencies for recycling advice and facilities.

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Warranty Information: Visit www.improvelectronics.com for details.

Boogie Board™ LCD Writing Tablet
(10.5" LCD)
Model: WT10355

BOOGIE BOARD TABLET ASSEMBLED IN CHINA FROM COMPONENTS OF THE USA (LCD) AND CHINA (PCB, CASE).
U.S.A. PAT. NO. 5,691,795, 5,899,566 AND 7,351,506.



www.improvelectronics.com
Kent Displays, 343 Portage Blvd., Kent, Ohio 44240

Boogie Board Tablet (10.5" LCD) User Guide 80004401A